

Boss Buck Inc.
Digital Timer

1. **CONNECTING UNIT:** Connect the unit to a 6v or 12v battery and the feeder motor. Current battery charge level and type will be displayed on the screen.
2. **CLOCK SETUP:** Press the program (P) button once from READY mode to enter the CLOCK mode. Press the program (P) button again to enter the clock settings. Use the + or – buttons to adjust to the desired hour. Press the program (P) button again and use the + or – buttons to adjust the minutes. After the time is set, wait 10 seconds to go back to READY mode automatically.
3. **SETTING THE FEED TIME, RUN TIME AND RPM:** Press the + or – buttons from READY mode to enter the appropriate Feeding (FEED 1 thru 6). Press the program (P) button to enter the feed time and use the instructions above (Item #2) to enter the appropriate feed time or OFF position. Press the program (P) button again and use the + or – buttons to enter the duration. Press the program (P) button again to set the RPM. Press (P), Feed time 1 is set. Press + button to set 2nd feed time.
4. **TESTING UNIT:** To test the unit, press and release the test (T) button. The unit will turn on after a 5 second delay, giving the user a chance to STEP BACK. The test will run for 3 seconds.
5. **CHECK BATTERY CHARGE:** The battery level indicated by the 5-bar icon on the screen, will display the charge level.

WARRANTY: 2-year warranty from the date of purchase against manufacturer defects due to normal wear and designed usage. To return defective timers, please send just the timer to the following address plus a check or money order in the amount of \$10 for return postage and handling. Also please send purchase information.

Boss Buck Inc.
210 S. Highway 175
Seagoville, TX 75159